


SHOWERSEEL

**DRAIN DETAIL
for
SHOWER PAN
LINER**

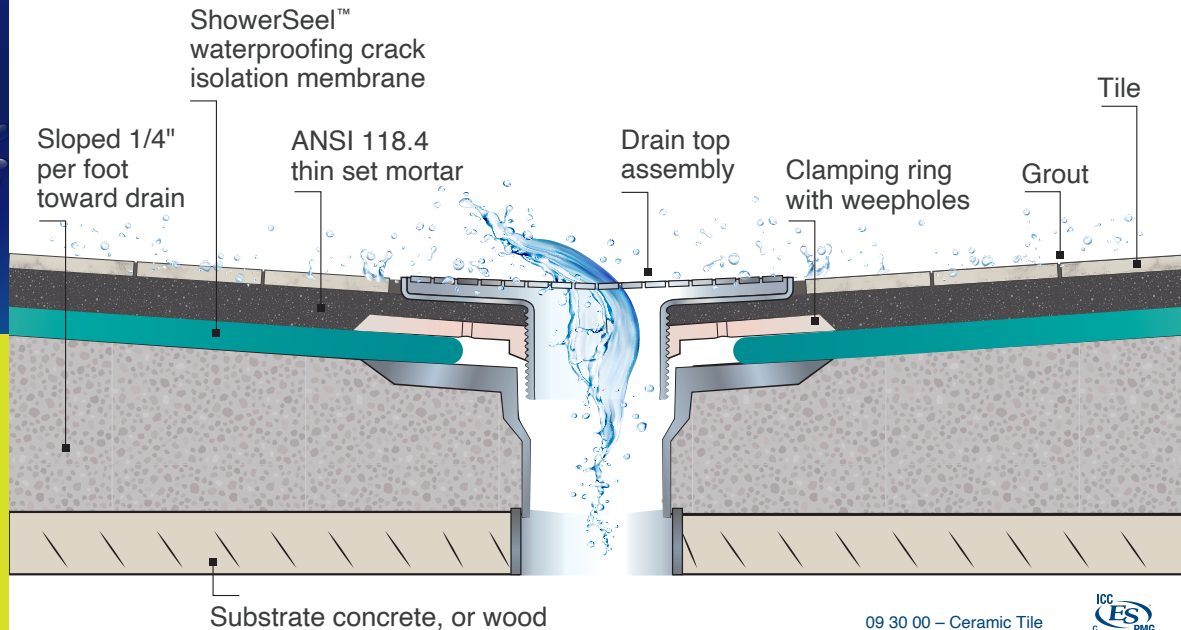

09 30 00 – Ceramic Tile





SEAMLESS WATERPROOF BARRIER



Easy waterproofing solution for tile shower construction.

When building a tile shower, moisture barrier membranes are required.

A waterproofing membrane is a watertight solution. ShowerSeel™ liquid membrane can be applied to custom-built showers to make the shower watertight.

Prevent mold & mildew growth

Anti-fracture protection up to 3/8"

Apply with brush, roller or trowel

Coverage Waterproofing Membrane
55 sq. ft. per gallon

Coverage Crack Prevention Membrane
110 sq. ft. per gallon

WWW.SHOWERSEEL.COM